

#927 TO FRONT  
PARK LIGHTS

#907 HEADLIGHT  
POWER

To have Front Park  
lights remain on  
when headlights are  
on, move the 927  
wire to the 929 (rear  
tail lights) terminal.

#961 DOME LIGHT  
GROUND

#928 HEADLIGHT  
POWER TO  
SWITCH

#929 TO REAR  
TAIL LIGHTS

#930 INSTRUMENT  
PANEL LIGHTING

